


QUICK GUIDE TO SETUP THE AUTO FEEDER



SCAN FOR
TUTORIAL VIDEO

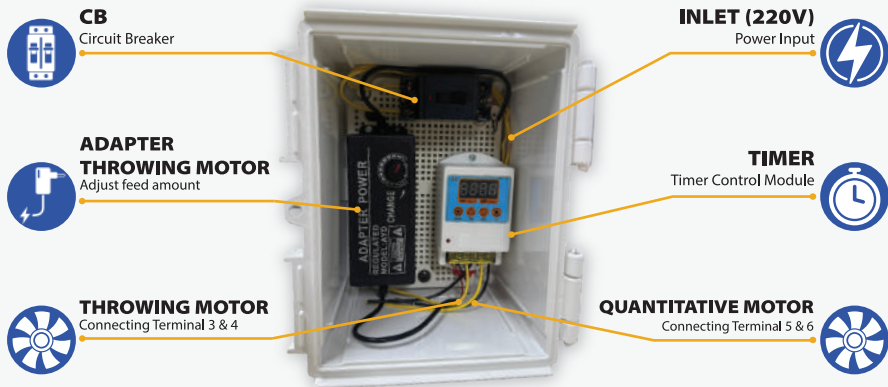

WHAT IT DOES?



ADJUST RESTING TIME

Set how long the motor rests between cycles.



ADJUST THROWING SPEED

Set the motor speed to control the feed throwing distance.



EASY OPERATION

Use a simple buttons to set and save.

1. ADJUSTING TIME AUTO FEEDER

1. Press "**Set**" button once to display the "**two-digit seconds**" value on the right side timer . Press "**Set**" button twice to display the "**two-digit minutes**" value on the left side timer.
2. Use the "**Up**" or "**Down**" buttons to adjust the feeding time (**seconds**) and resting time (**minutes**) as needed.
3. After setting the desired values, press "**Save**" to store the feeding time (**Seconds**) and resting time (**Minutes**).



2. ADJUST THROWING & QUANTITATIVE MOTOR SPEEDS

1. Press and hold "**Down**" button until "**P3**" is displayed to adjust the quantitative motor speed and Press and hold "**Up**" button until "**P2**" is displayed to adjust the throwing motor speed.
2. "**P3**" indicates the quantitative motor **speed level (1-9)**, while "**P2**" indicates the throwing motor **speed level (1-9)**. Adjust the speed level to suit your operating requirements.
3. Press "**Save**" twice, or turn the "**CB**" OFF and ON to save the settings